

Bottom Inlet & Outlet Ports are Interchangeable

Underneath the tank you will find two ports for the bottom zone or jacket. Connect your steam, water, or Glycol lines here. The ports are interchangeable so either port can be the inlet or the outlet. .




Bottom Jacket Ports
These ports are interchangeable

Inlet & Outlet-Single Zone Jacket Install



Steam must always enter from the top inlet jacket and exit from the bottom or lower jacket port.

Water or Glycol must always enter from the lower inlet port of the jacket and exit from the top or higher jacket port.

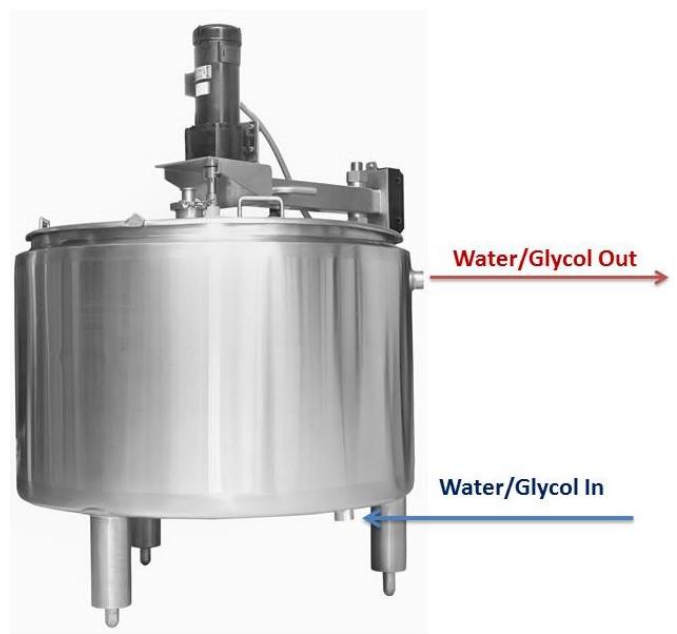

Inlet & Outlet-Two Zone Jacket Install



Steam must always enter from the top inlet jacket and exit from the bottom or lower jacket port.

Bottom ports are interchangeable.

Water or Glycol must always enter from the lower inlet port of the jacket and exit from the top or higher jacket port.



Bottom ports are interchangeable.


Inlet & Outlet-Three Zone Jacket Install



Bottom Ports are interchangeable.

Steam must always enter from the top inlet jacket and exit from the bottom or lower jacket port.

Water or Glycol must always enter from the lower inlet port of the jacket and exit from the top or higher jacket port.

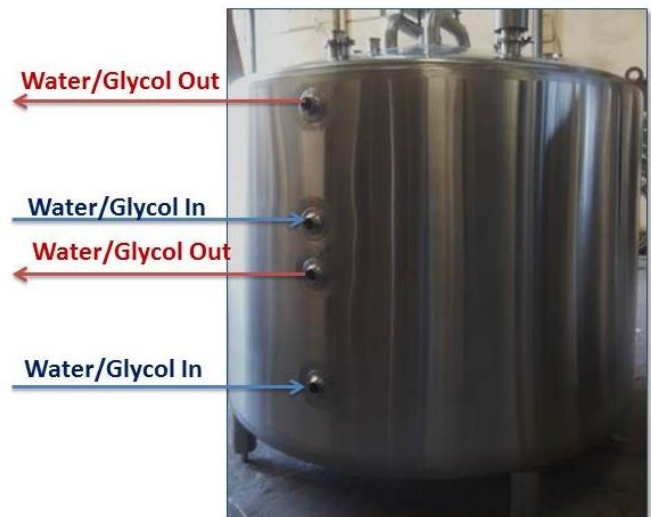

Bottom Ports are interchangeable.